

# Woodland Screens with Feet and Curtain



3WS12, 3WS23, and 3WSF



3WS12 and 3WS23  
Woodland Teak Screens, with integral LED lighting



3WSF  
Woodland screen foot

**1** An optional screen curtain available in three colours:  
Martinique (Textilene®), Ebony (Jacquatex®), or Ivory (Jacquatex®)

ref: 3WSC12.509 Woodland Screen 122 Curtain – Martinique  
ref: 3WSC12.600 Woodland Screen 122 Curtain – Black  
ref: 3WSC12.601 Woodland Screen 122 Curtain – Ivory

ref: 3WSC23.509 Woodland Screen 228 Curtain – Martinique  
ref: 3WSC23.600 Woodland Screen 228 Curtain – Black  
ref: 3WSC23.601 Woodland Screen 228 Curtain – Ivory

**2**

Attaching and detaching the curtain is a **2 person job**

**3**

Locate and push curtain rail firmly into teak channel

**4**

NB: Velcro locators on the teak frame secures the curtain.  
3SW12 we will have 2 pcs WSCT-302/308  
and for 3SW23 we will have 4 pcs WSCT-302/308

Place into locating hole

**5**

NB: Ties to hold the roller blind in place and the Velcro locators on the curtain and the teak frame, secures the curtain – see right insert images

3WS12 – WOODLAND TEAK SCREEN  
122cm (L) x 178cm (H)

Velcro locators

**6**

3WS23 – WOODLAND TEAK SCREEN  
228cm (L) x 133cm (H)