


BIFOLD DOOR

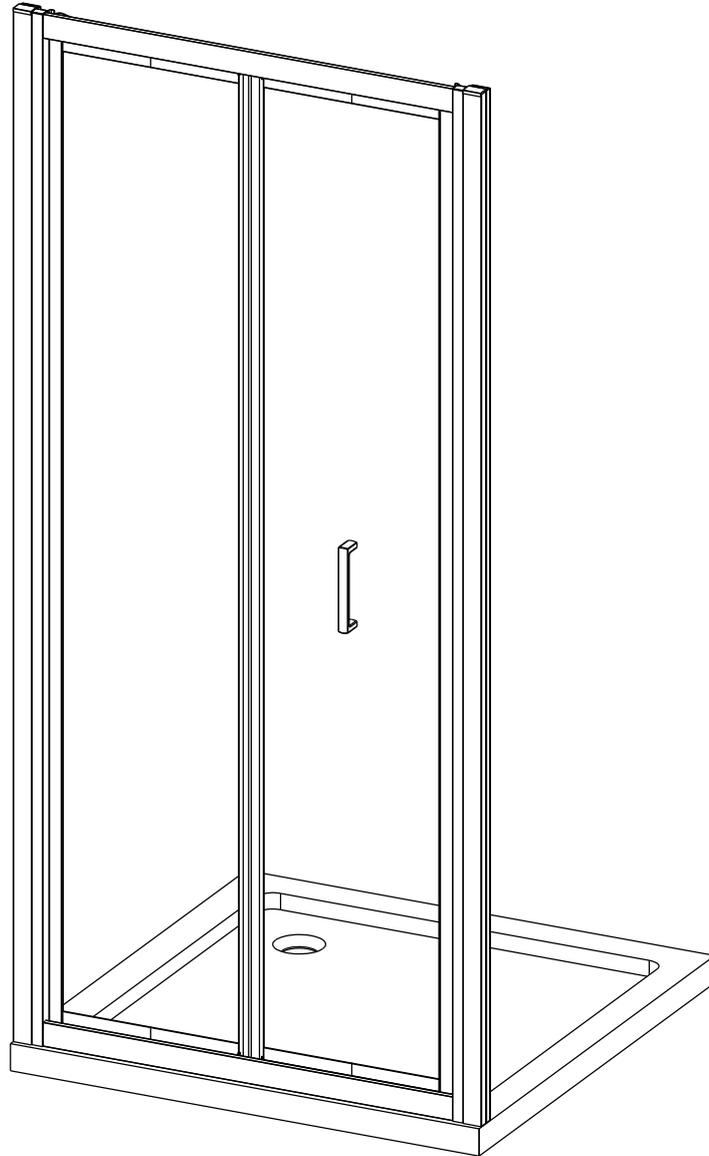

INSTALLATION GUIDE

IMPORTANT:Please read the complete instructions before commencing fitting.

Make sure the tray is 100% level in all directions.

Check that you have the tools required.

Check the installation site is compatible with the size of door supplied.

Check all the enclosure components are present.

Check the installation kit is complete.

Do Not attempt to install the product unless you can tick all 4 boxes.

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type. It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

ATTENTION: TAKE EXTREME CARE WHEN HANDLING GLASS, WEAR PROTECTIVE EYEWEAR AND CLOTHING. DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR IMPACTS DURING THE INSTALLATION.


Fixing kit components




x12
2SS008



x12
2SS009




4x30mm
x6
2SY51




x6
2SP12





4x16mm
x6
2SY50

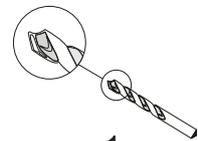

x1
C056



x2
MB0073/MB0074








x2
MB0075



x1
Handle

Tools required

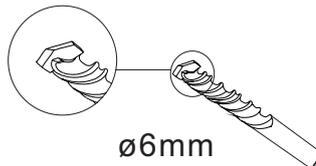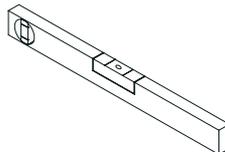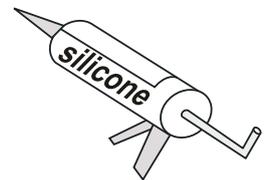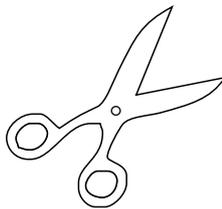

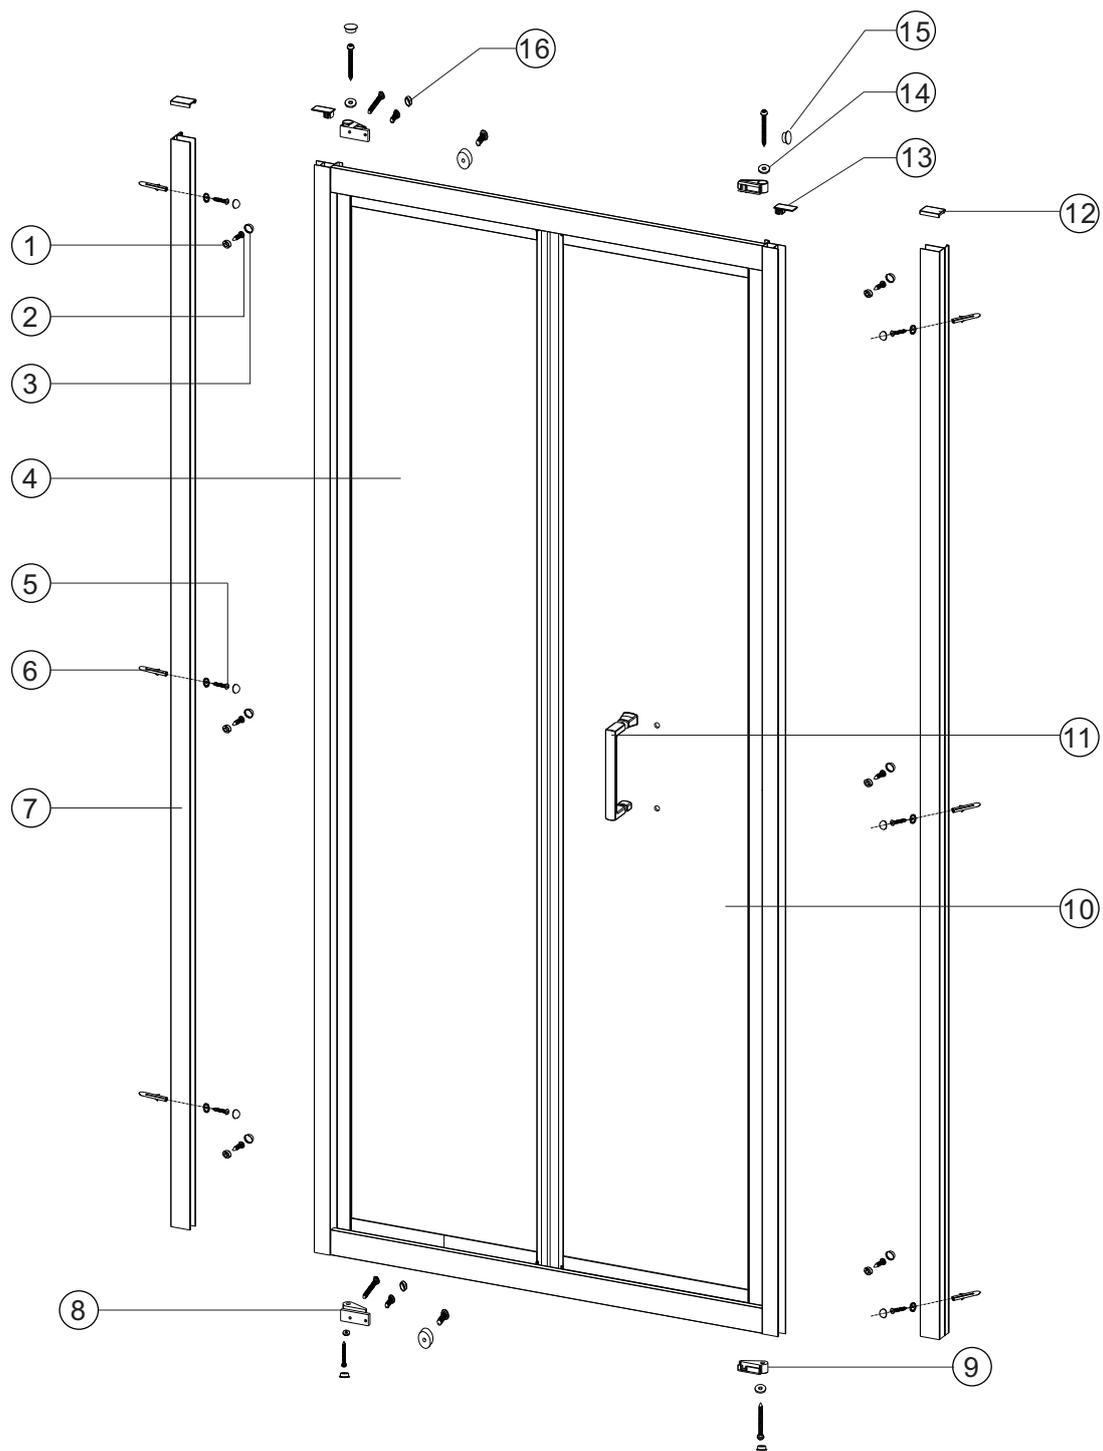


NO.	Qty	Part No.
1	12	2SS009
2	6	2SY50
3	12	2SS008
4	1	A
5	6	2SY51
6	6	2SP12


NO.	Qty	Part No.
7	2	MB0001
8	2	2SS018L/2SS018R
9	2	2SS020L/2SS020R
10	1	B
11	1	Handle
12	2	MB0073/MB0074

NO.	Qty	Part No.
13	4	MB0075
14	4	2SQF2
15	4	2SS013
16	2	2SS020A

3 When fitting a fully framed product into a recess you must push the wall profiles onto the uprights uprights and then lifting onto the tray. This is done as fitting the wall profiles first in a tight recess may lead to difficulty later when fitting the door.

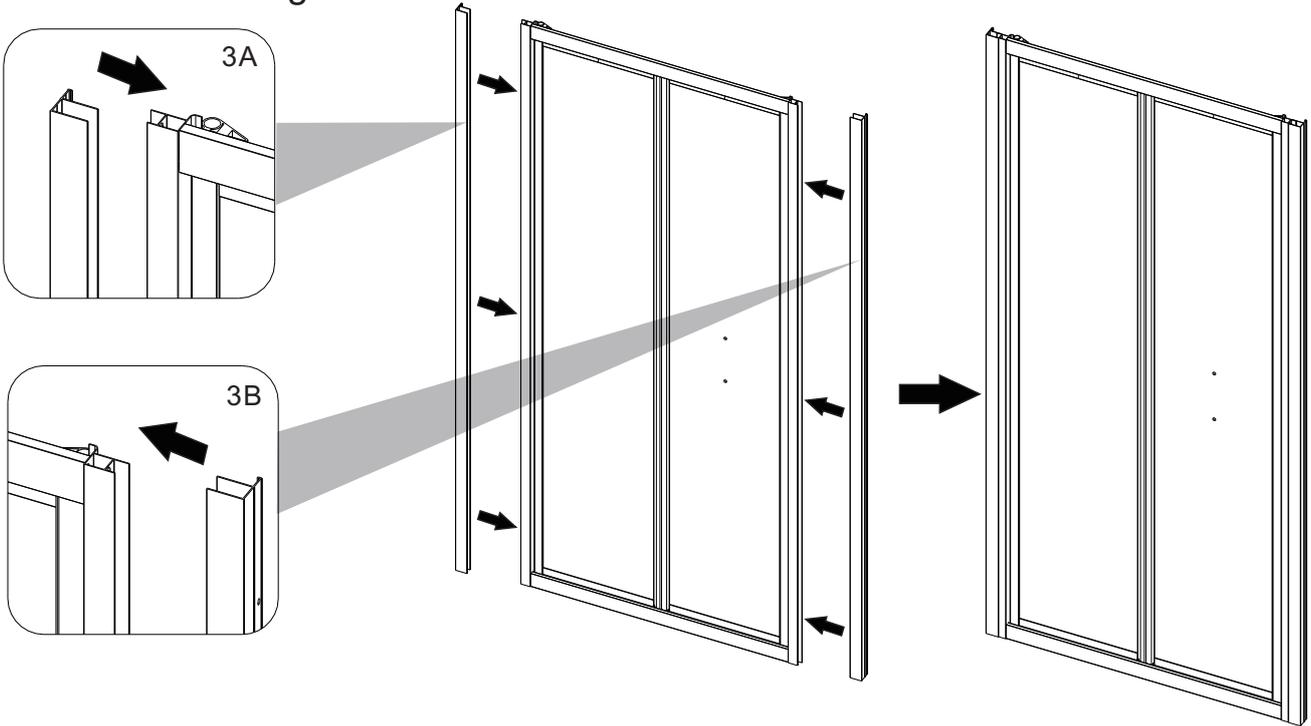


4
 4A Fix the frame to the wall using screws and cover clips.
 4B Fit cover caps
 4C Equalise the adjustment of the frame in the wall profile on both sides.
 4D From inside drill the frame top, middle and bottom making sure to leave adequate room to fit the cover caps.
 4E Fix the frame with screws and cover clips.
 4F Fix cover caps.

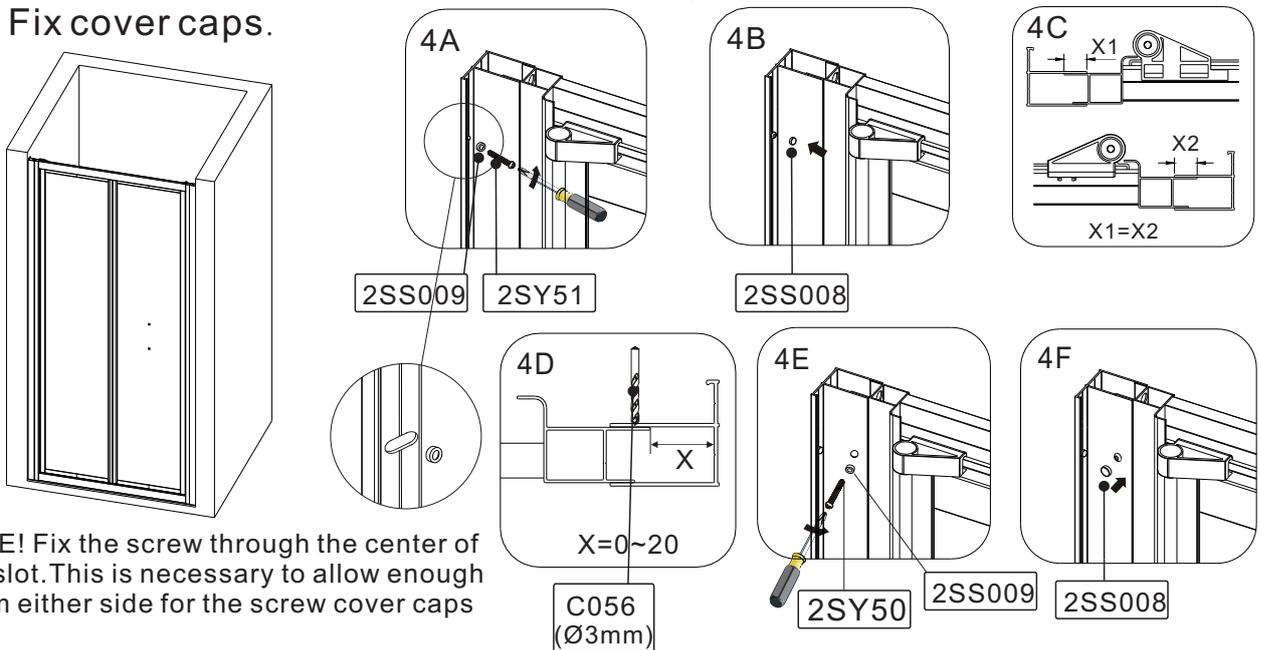

NOTE! Fix the screw through the center of the slot. This is necessary to allow enough room either side for the screw cover caps

5


Fit the handle and cover caps

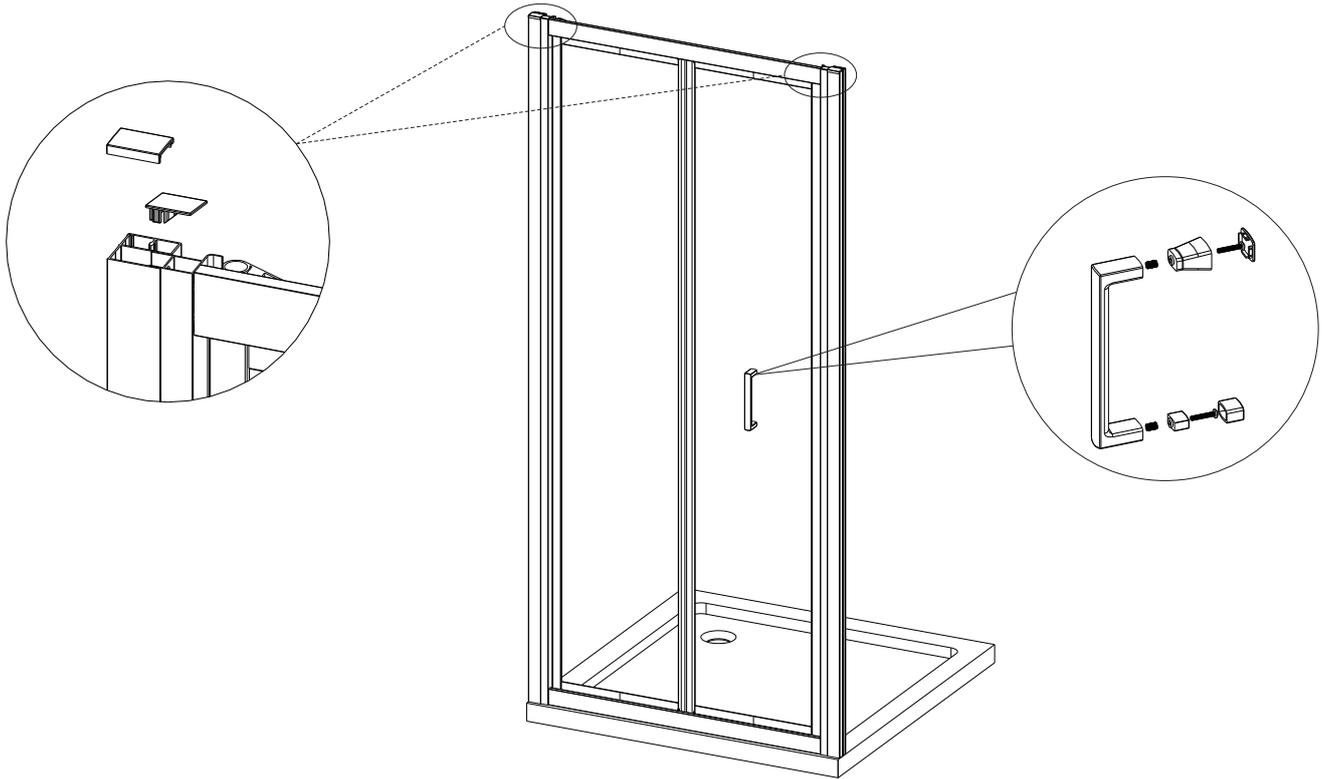

6

Use a quality sealant to seal the finished door. Seal any joints between profiles on bottom. Seal on the outside along the bottom rail and between the wall and the wall profile. Seal 50mm vertically between the frame and the wall profile.

DO NOT USE THE ENCLOSURE FOR 24 HOURS AFTER SEALING

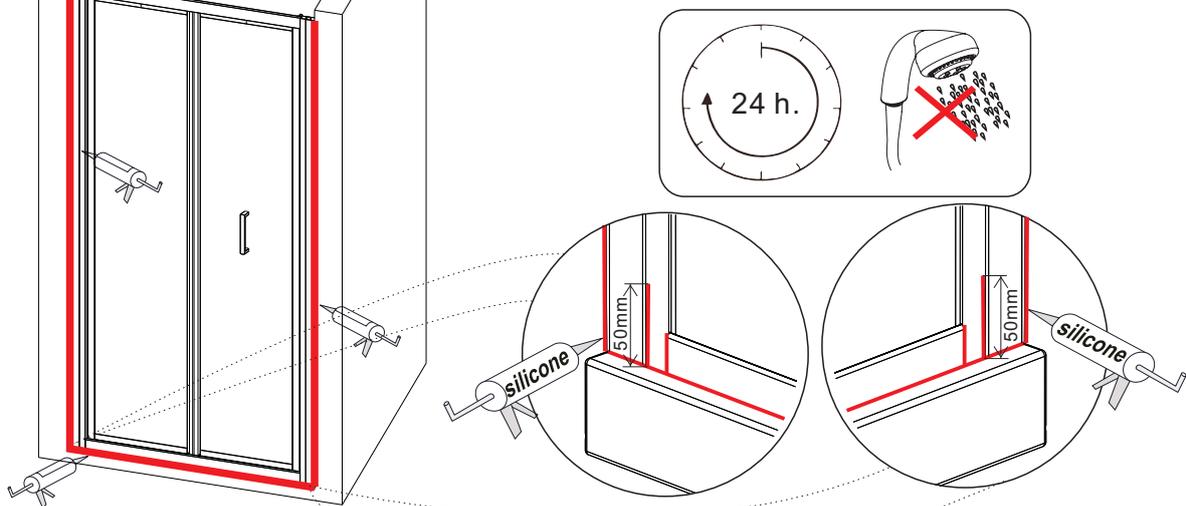

	
Merlyn Industries LTD (MER09)	
DOP:CENMB1.1	
16	
EN 14428	
Shower enclosures with aluminium profiles and safety glass	
Cleanability	:Pass
Impact resistance/ shatter properties	:Pass
Durability	:Pass

To download the Declaration of Performance (DOP) for this product please use the link below.
<https://merlynshowering.com/wp-content/uploads/2016/11/New-MBox-Enclosures-DOP-CENMB1.1.pdf>