


Series 8 Side Panel

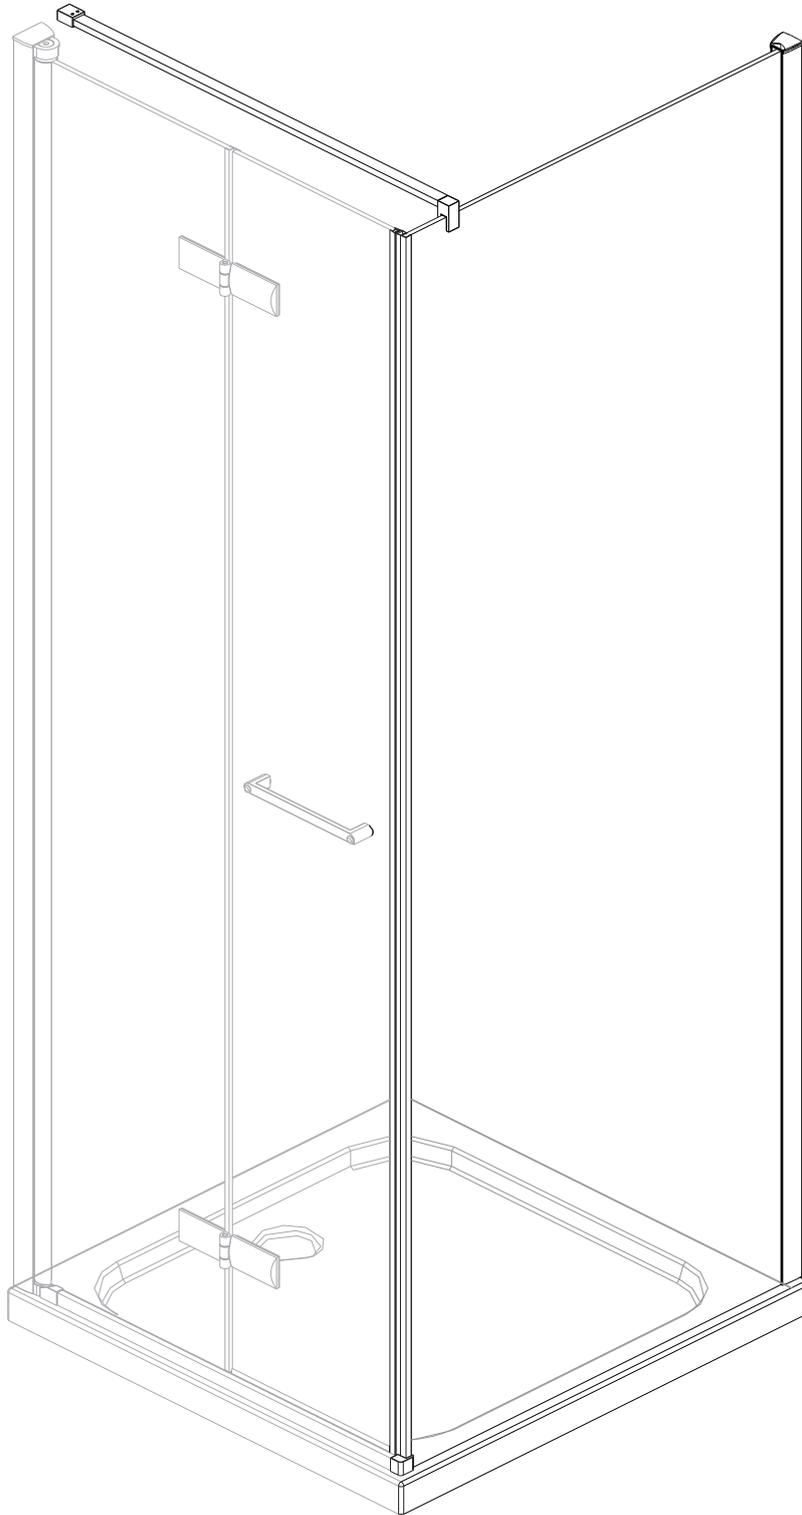

IMPORTANT

Thank you for choosing Merlyn. Please familiarise yourself with the fitting instructions before commencing fitting.

1. Check that you have the tools required.
2. Check that the installation site is compatible with size of door supplied
3. Check all the enclosure components.
4. Check that the installation kit is complete

DO NOT attempt to install the product unless you can tick ALL 4 boxes as satisfactory.

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud-partition' walls will require alternative fixings. Please consult a hard ware supplier for the correct type.


It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.


USE SAFETY EYEWEAR WHEN DRILLING

Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect shower enclosure before fitting as no claims will be acceptable after product has been installed.

Adjustment when used as side panel




Size	Adjustment 'X'	Adjustment 'Y'
760	715-735	715-735
800	755-775	755-775
900	855-875	855-875
1000	955-975	

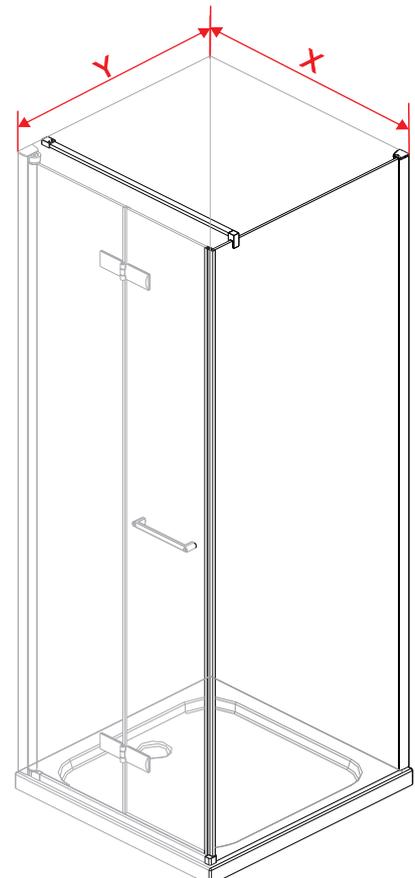

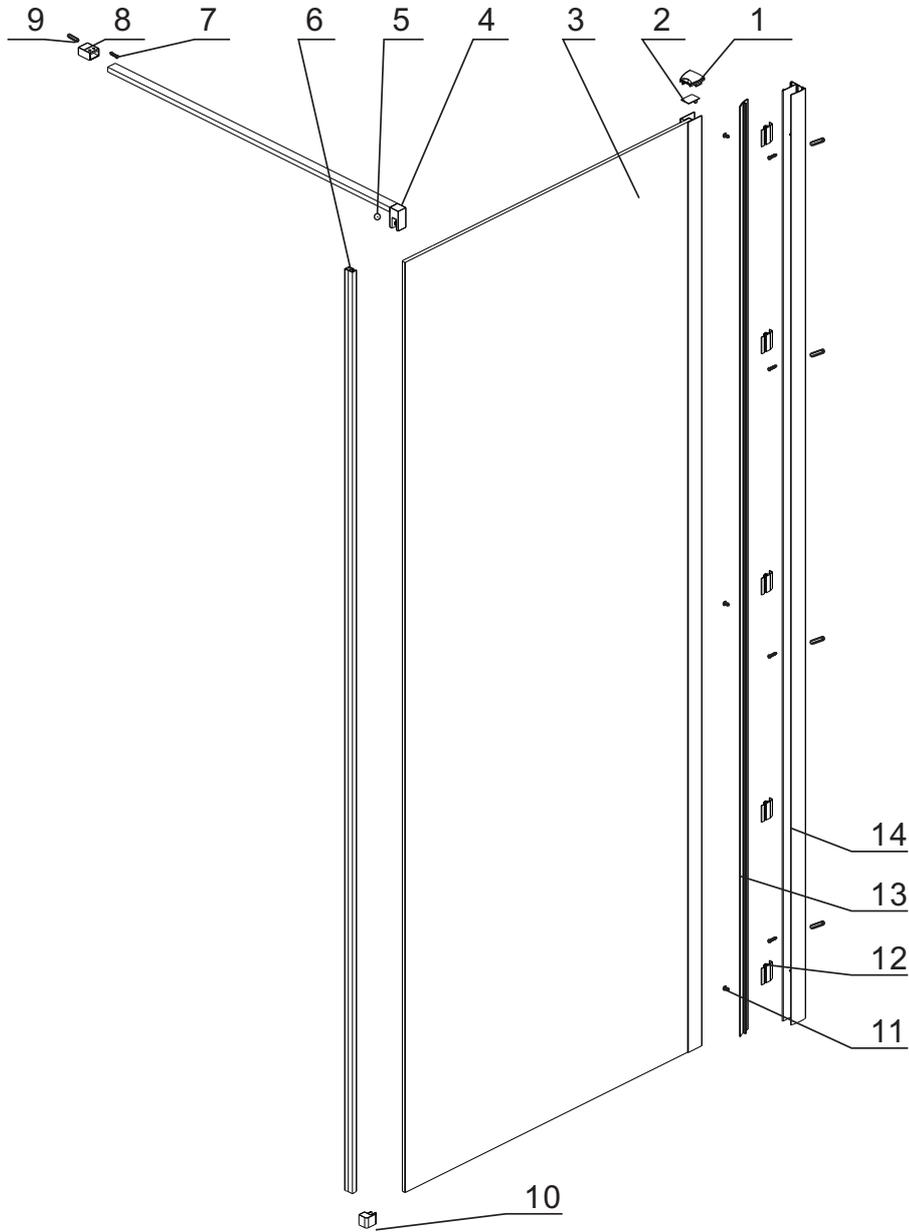

No	Description	QTY	Part No.	No.	Description	QTY	Part No.
1	Wall profile cover cap L/R	2	B08060 L/R	8	Wall bracket	1	M7127
2	Upright profile cover cap	1	B08062	9	Φ6x30 wall plug	5	B08070
3	Glass Panel A	1	A	10	Bottom strip corner clip(L&R)	2	M7126
4	Top support bar with glass clamp	1	M7128	11	Screw ST4x12	3	A2401201
5	Screw cap	1	M7012	12	Cover strip clip	5	M7009
6	Magnet seal	1	M7130	13	Cover strip	1	M7104
7	Flat head screw ST4x30	5	2SY51	14	Wall profile	1	M7129

Fixing kit components

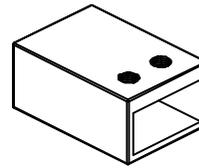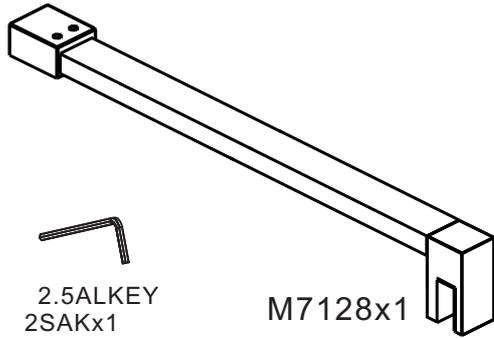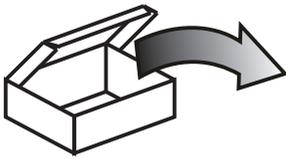


4x30mm








4x12mm



Ø3mm

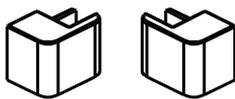


Tools required

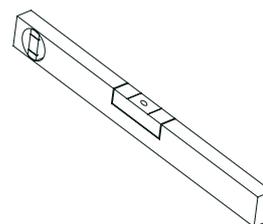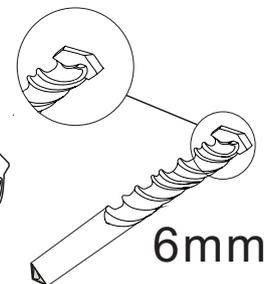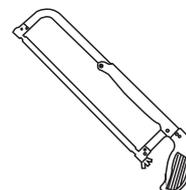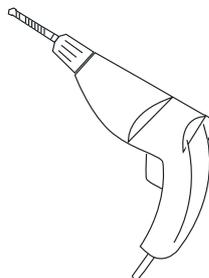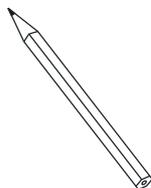

PROCEDURE


1

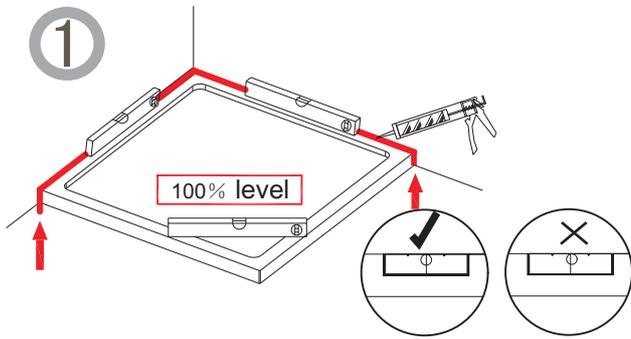

TRAY MUST BE LEVEL IN ALL DIRECTIONS!


Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom tile.**

TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.

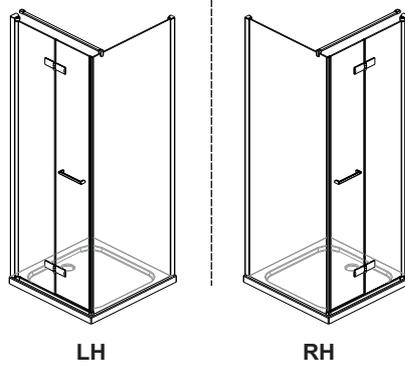


Note: Determine the handing, note that the wall profile is only fitted to the side panel.


2

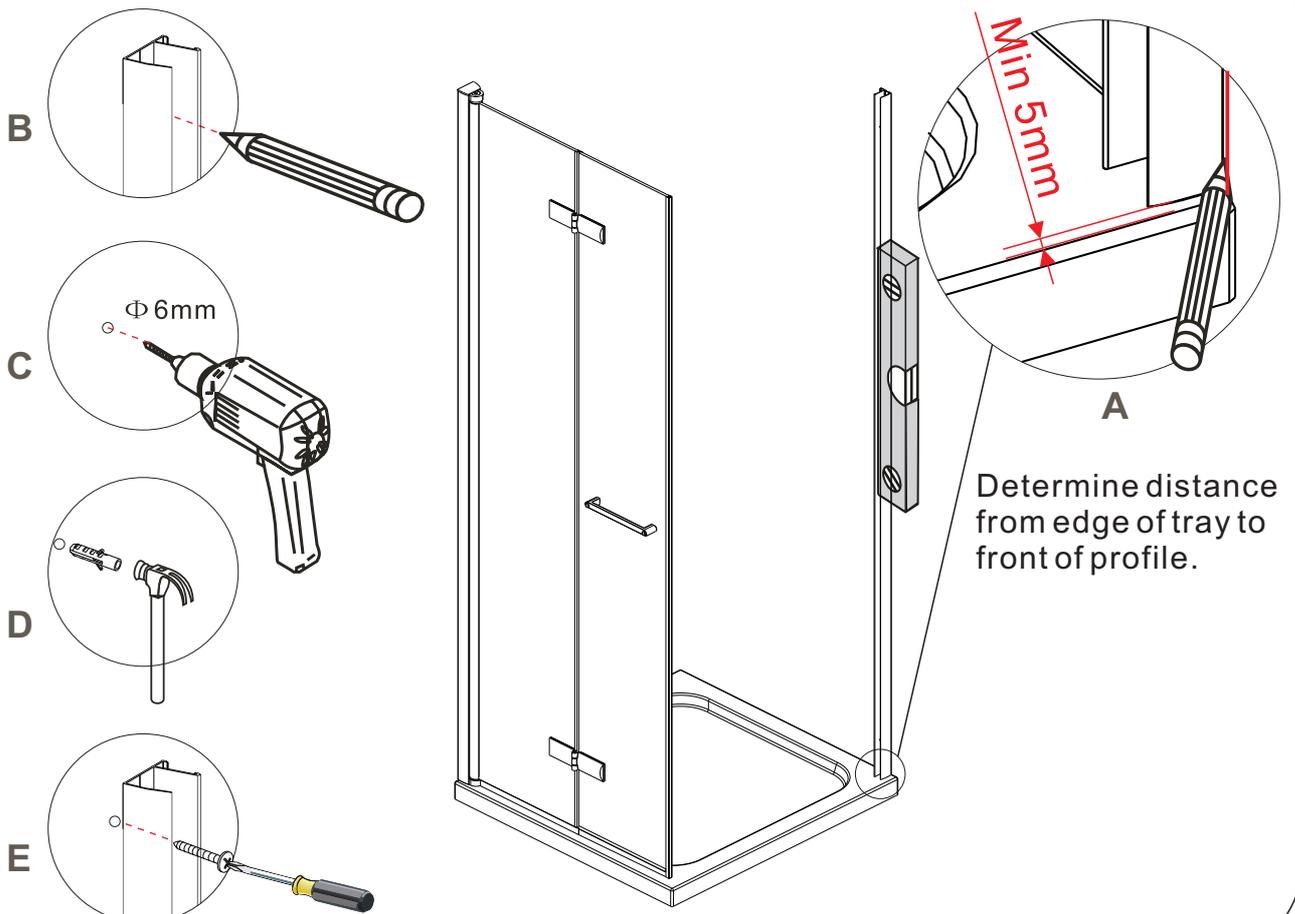





3

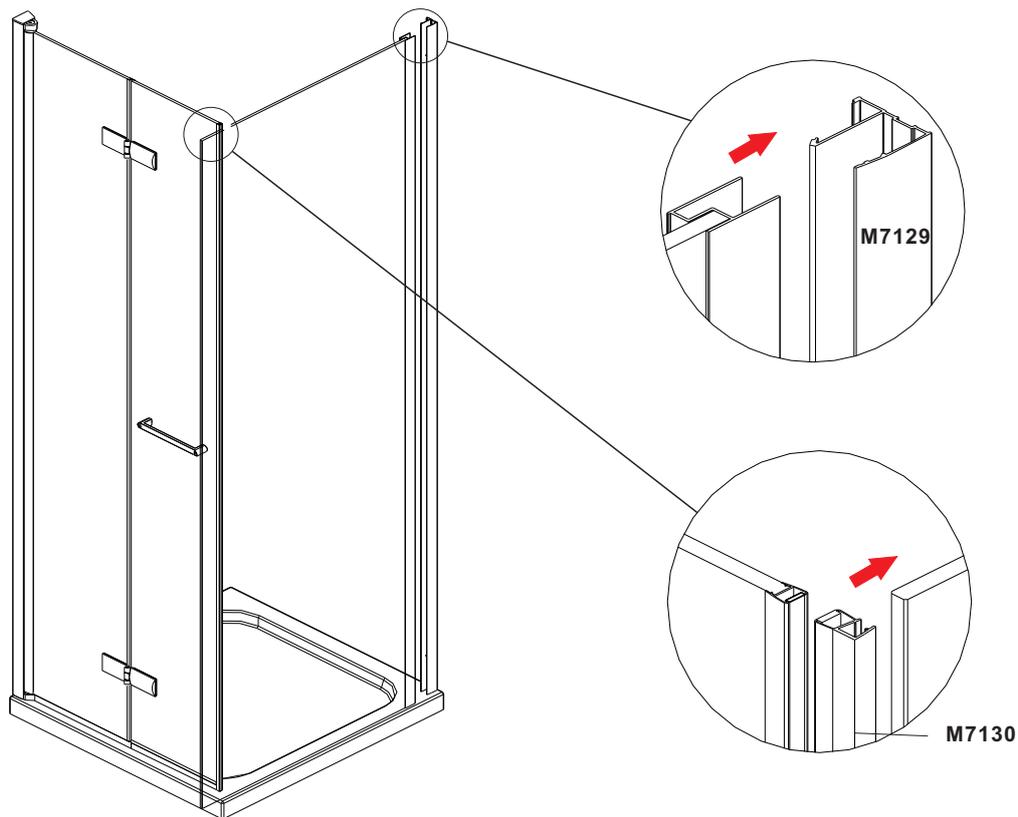





4

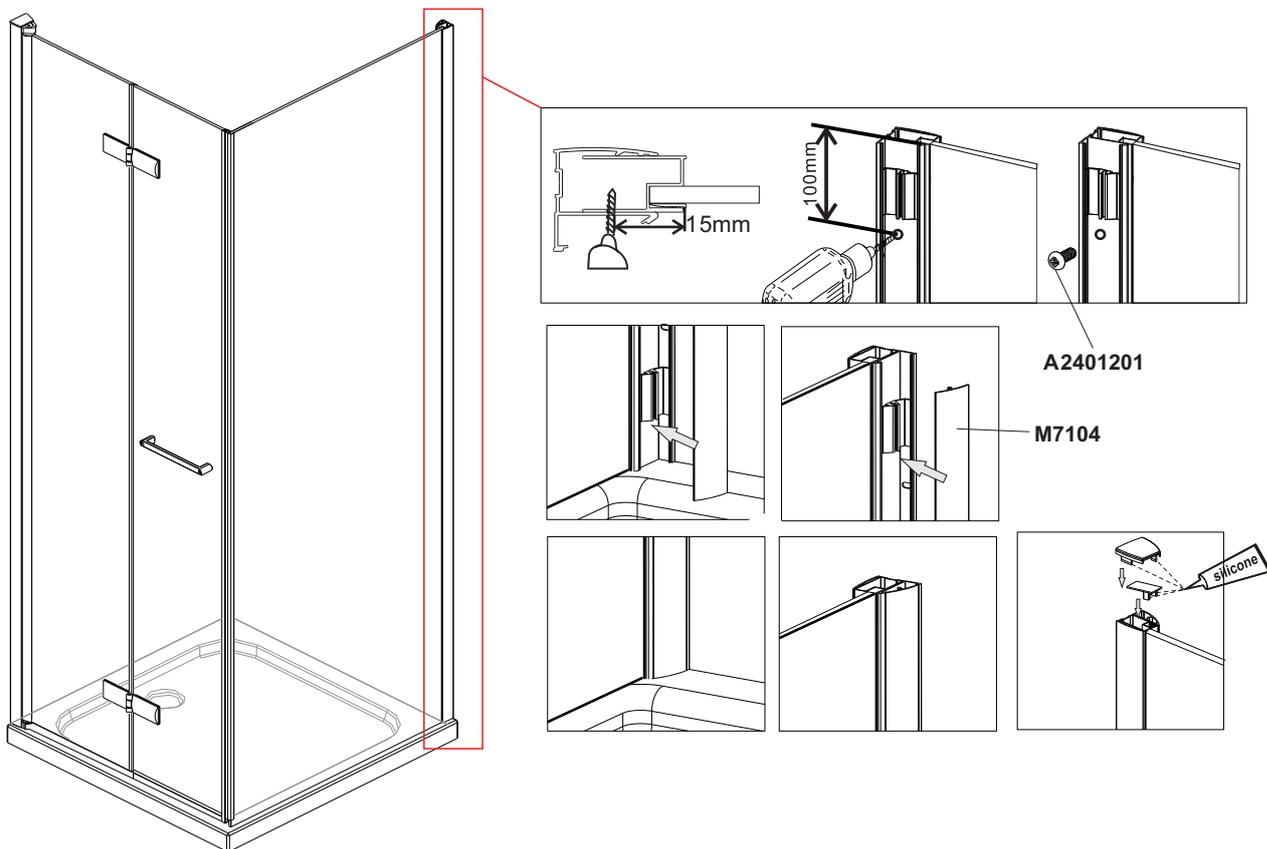





5

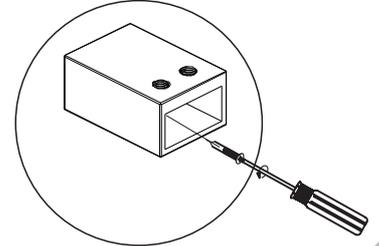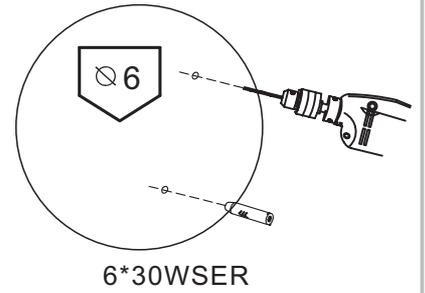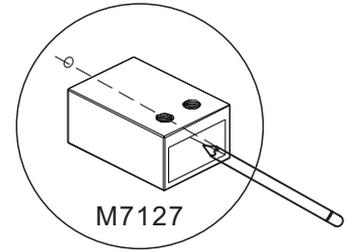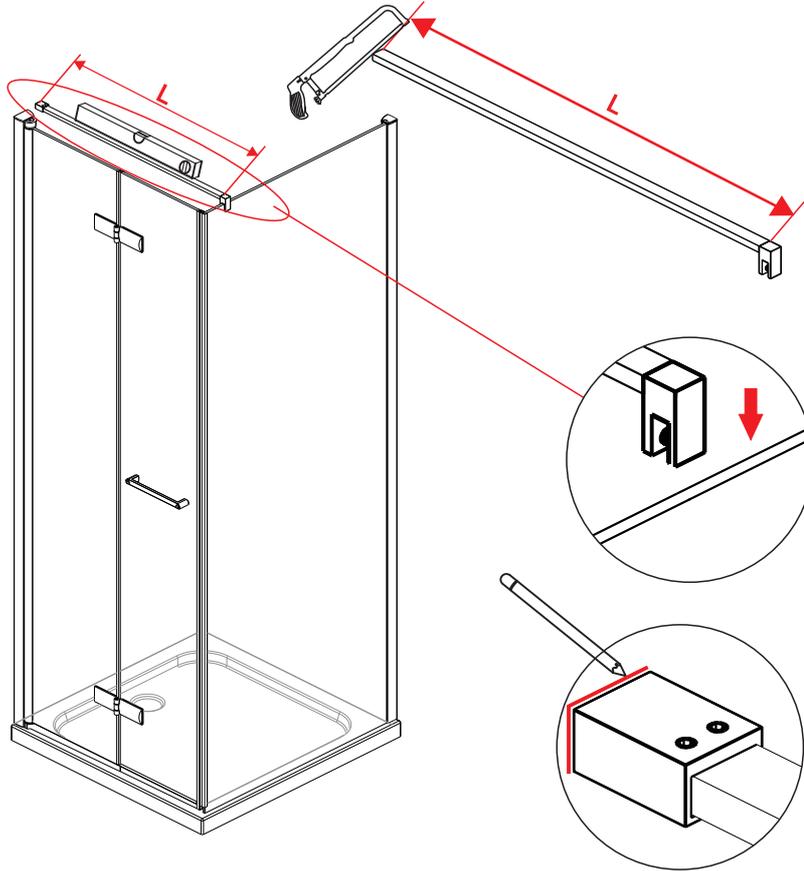

6

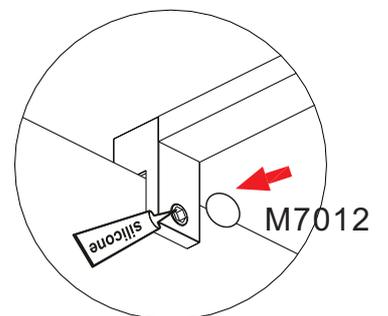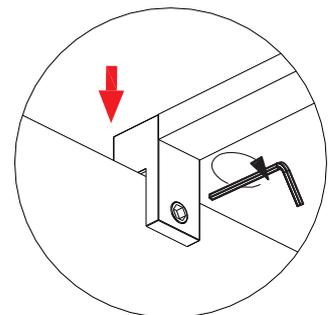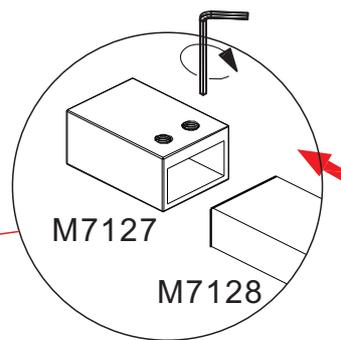
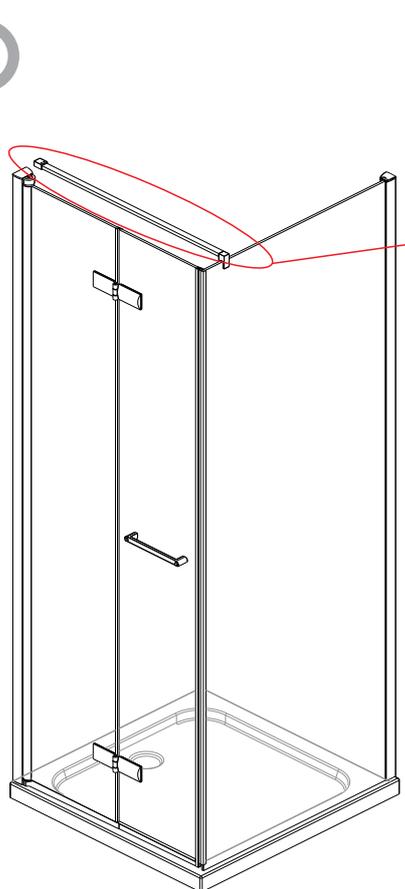


7

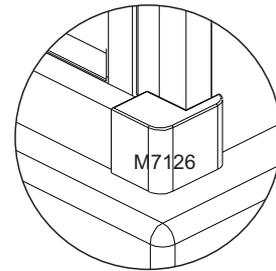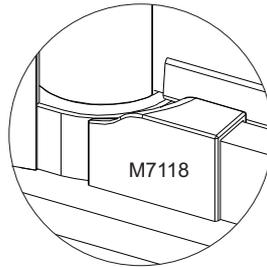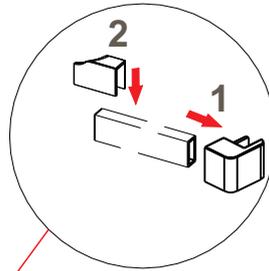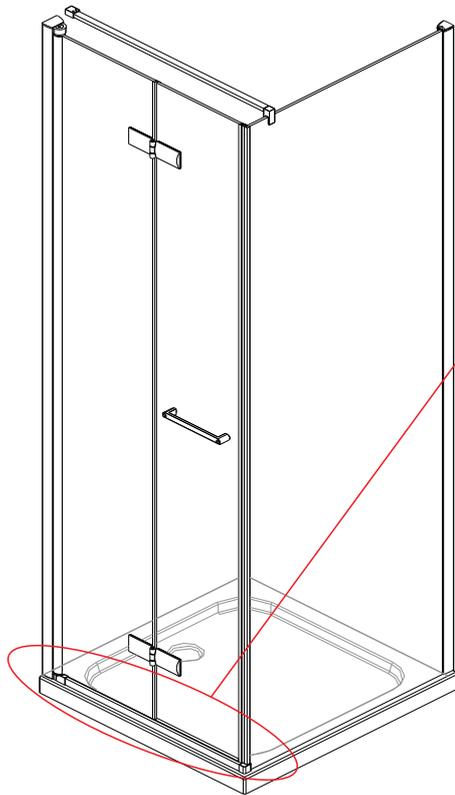

WARNING - The bottom profile must be used to ensure water tightness under the moving panel. We cannot guarantee water tightness if this is not used.

8

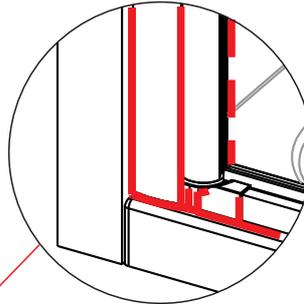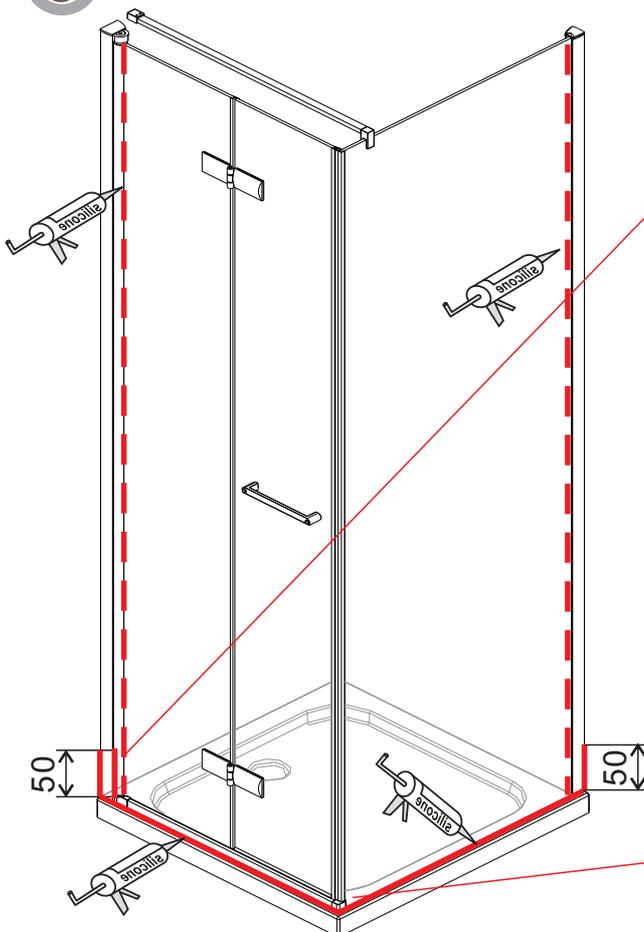



SEALING INSIDE

Seal top to bottom on the **INSIDE** between the wall profile and the wall.

Note: Do not apply sealant on the inside of the tray.

SEALING OUTSIDE

Seal only along bottom on the **OUTSIDE** between glass/rail/profile and the tray and approx 50mm up between the wall profile and the wall. Seal joint between bottom profile and upright profile.

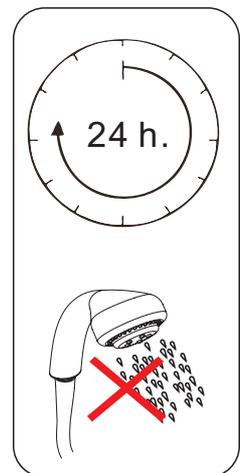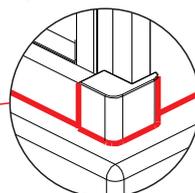

DO NOT USE THE ENCLOSURE FOR 24 HOURS AFTER SEALING