


3 PANEL SLIDING DOOR

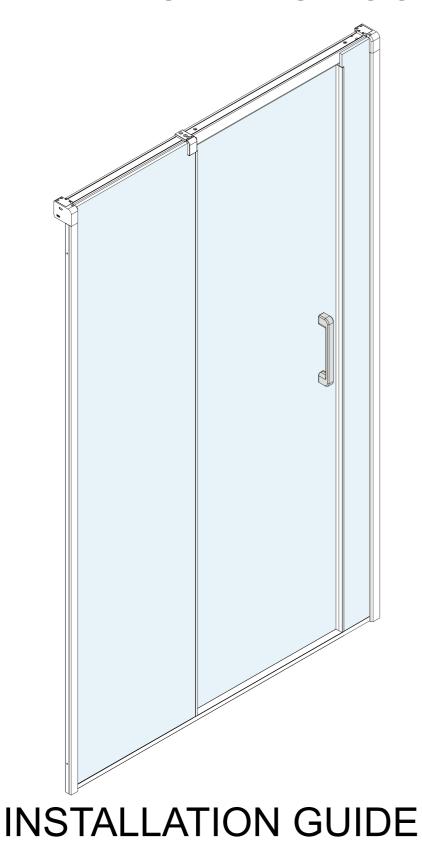

IMPORTANT: Please read the complete instructions before commencing fitting.

Make sure the tray is 100% level in all directions.

Check that you have the tools required. □

Check the installation site is compatible with the sizes of door supplied. □

Check all the enclosure components are present. □


Check the installation kit is complete. □


Do Not attempt to install the product unless you can tick all 4 boxes.

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type.


It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.


ATTENTION: TAKE EXTREME CARE WHEN HANDLING GLASS, WEAR PROTECTIVE EYEWEAR AND CLOTHING. DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR IMPACTS DURING THE INSTALLATION.

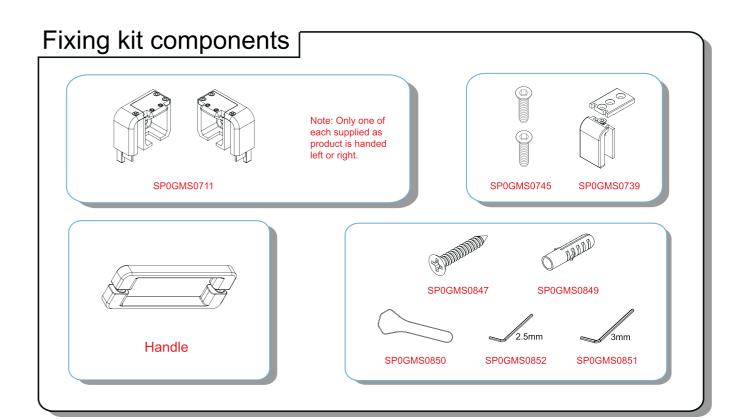

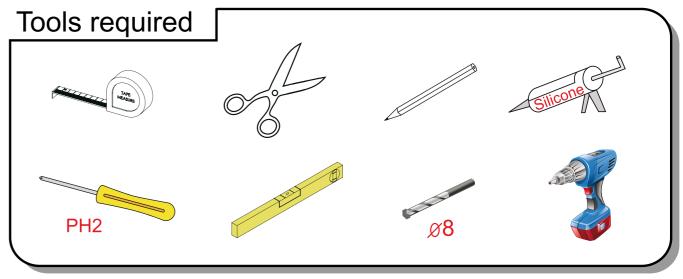



2.

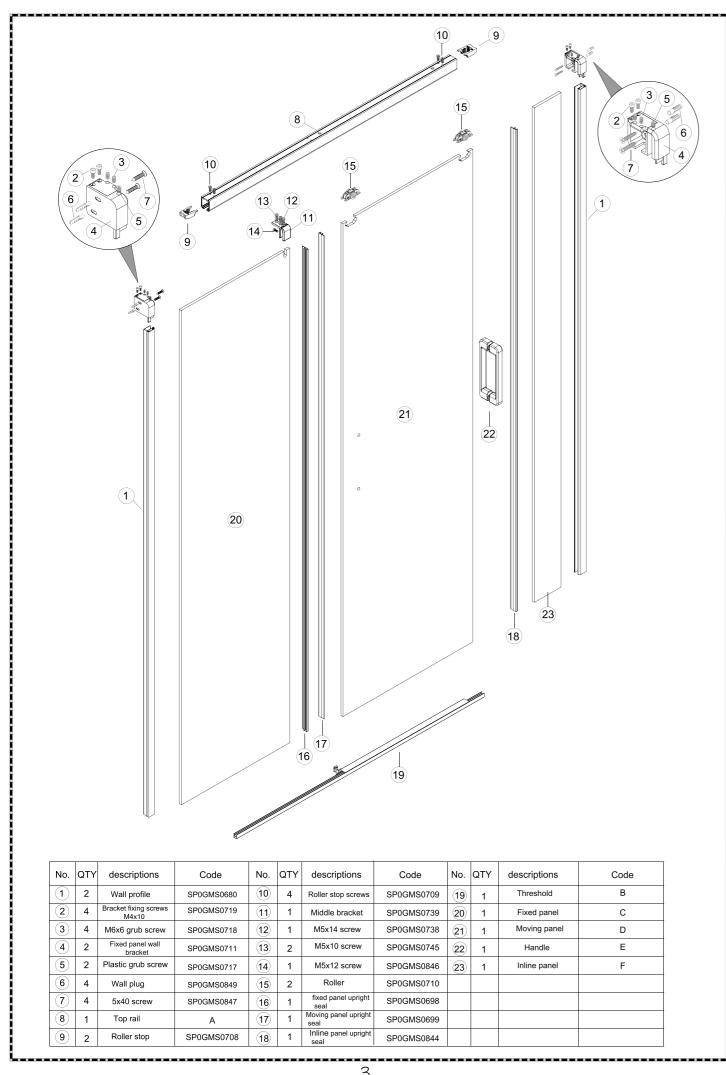


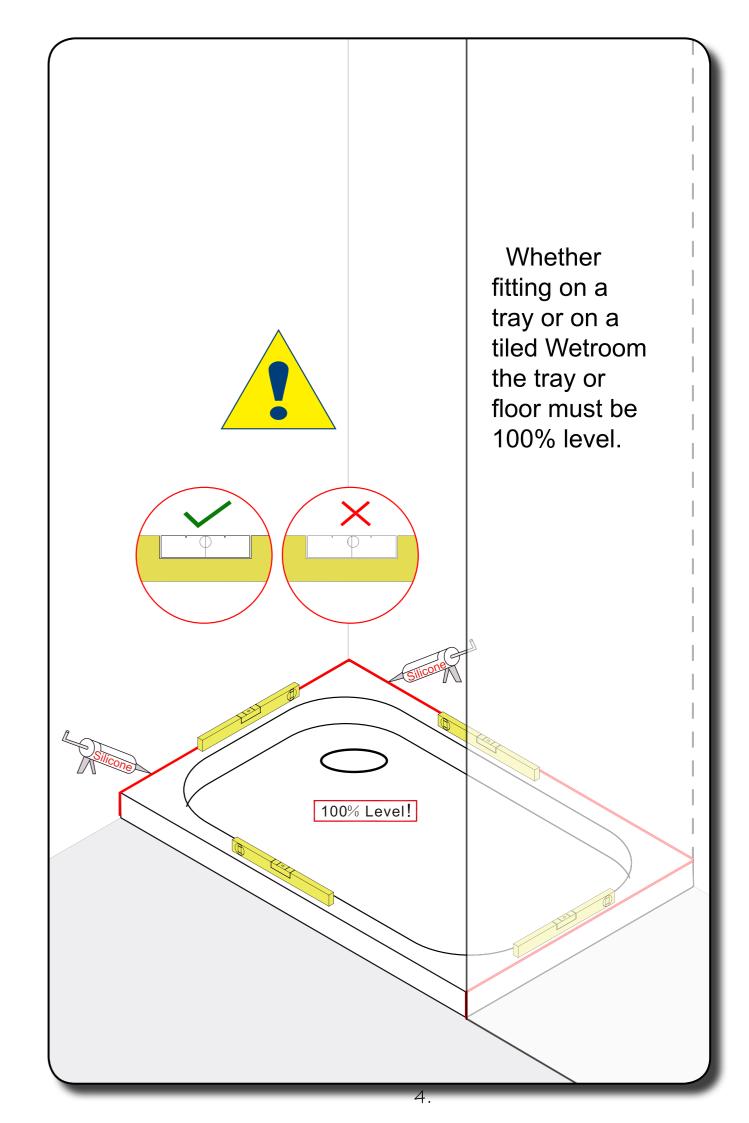



3.

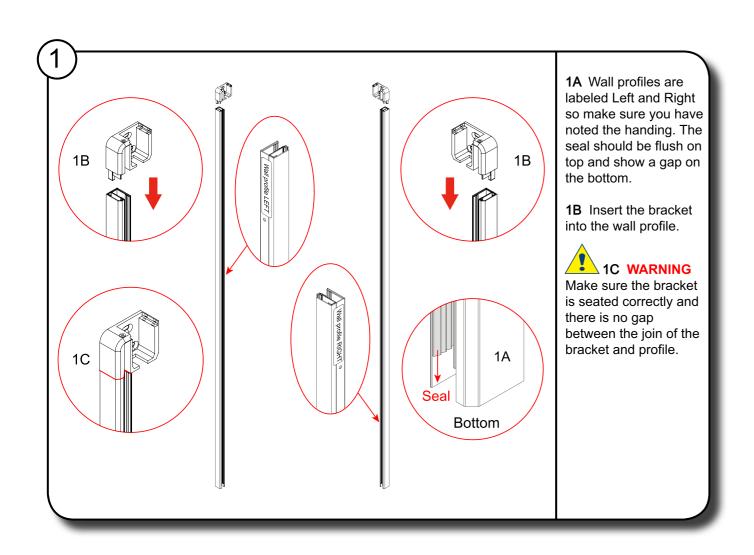


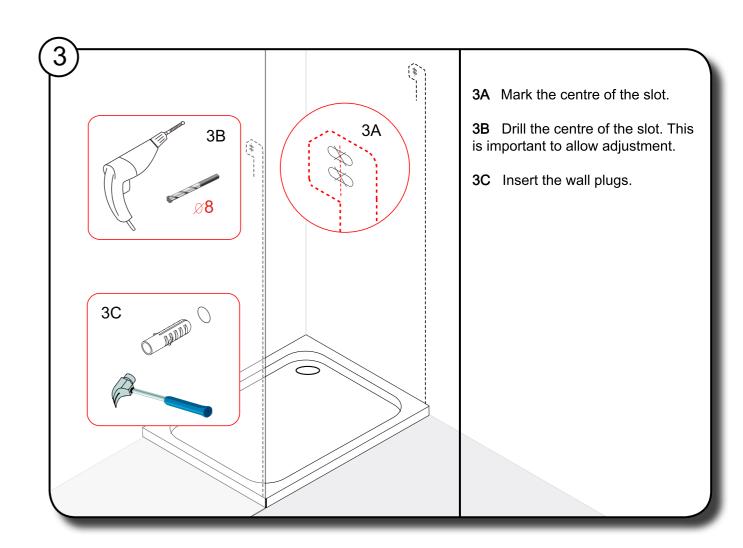


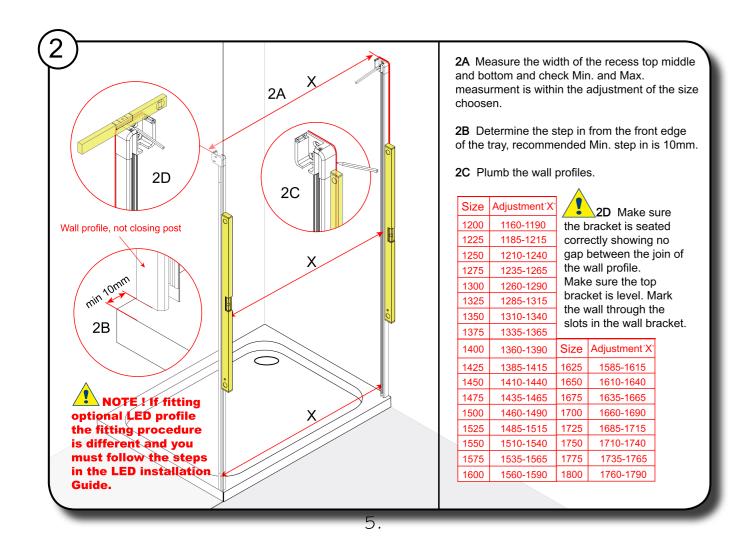


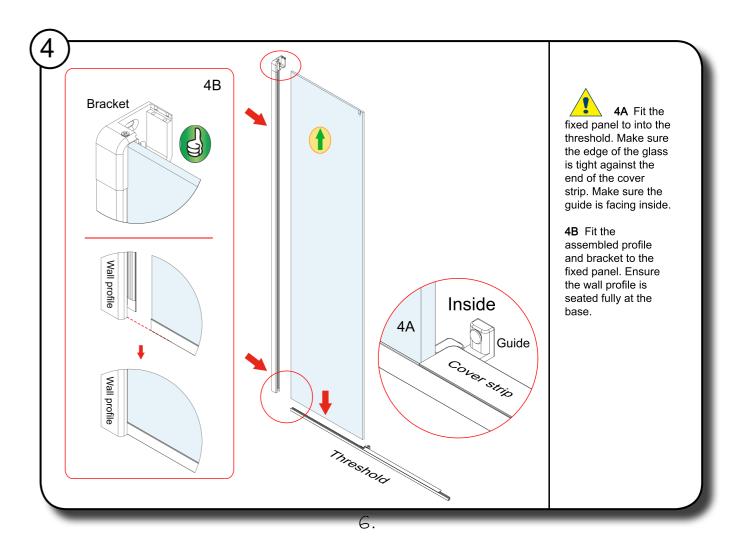


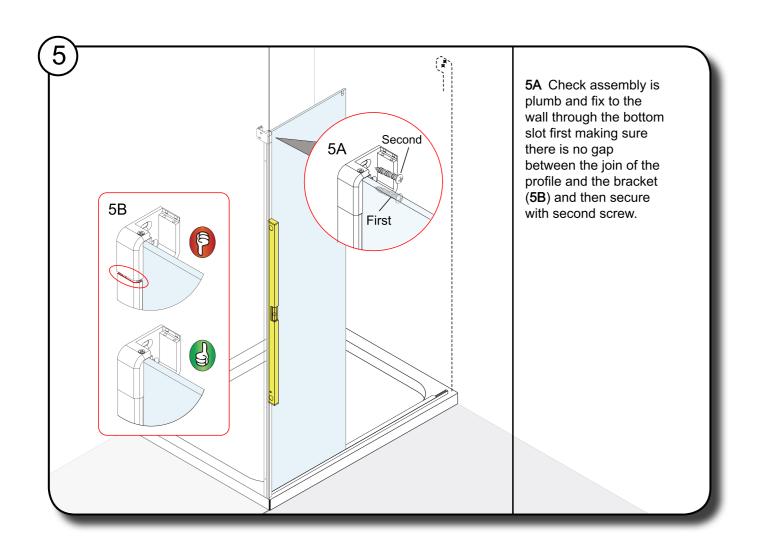


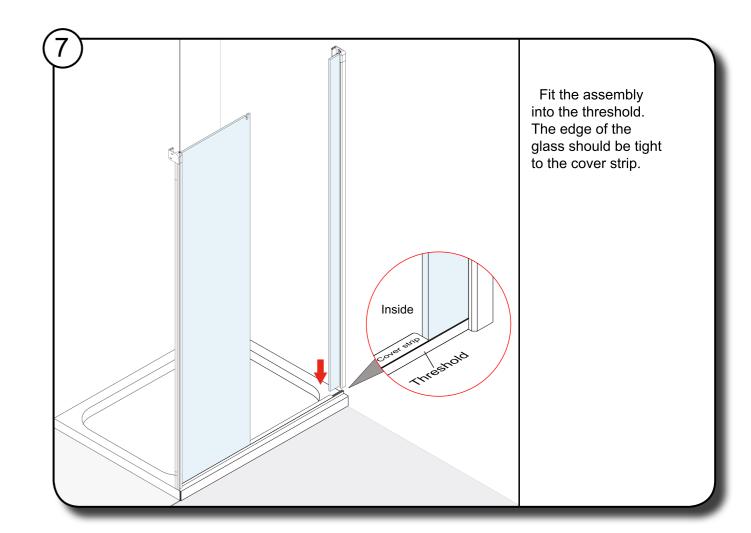


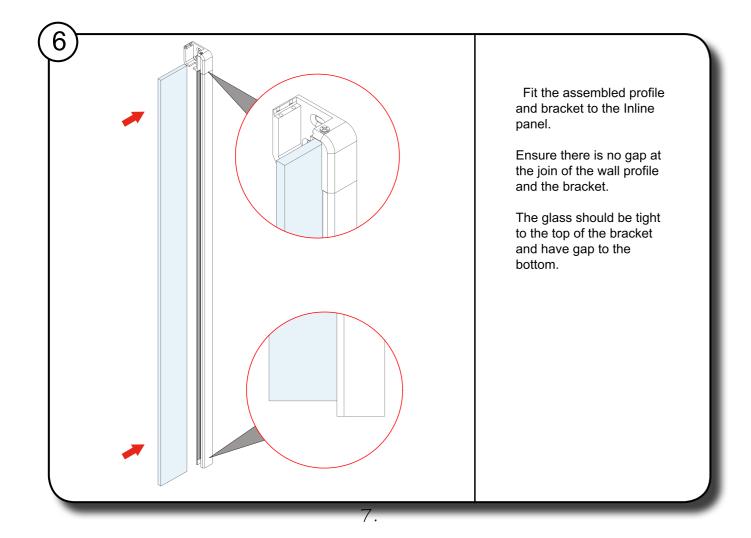


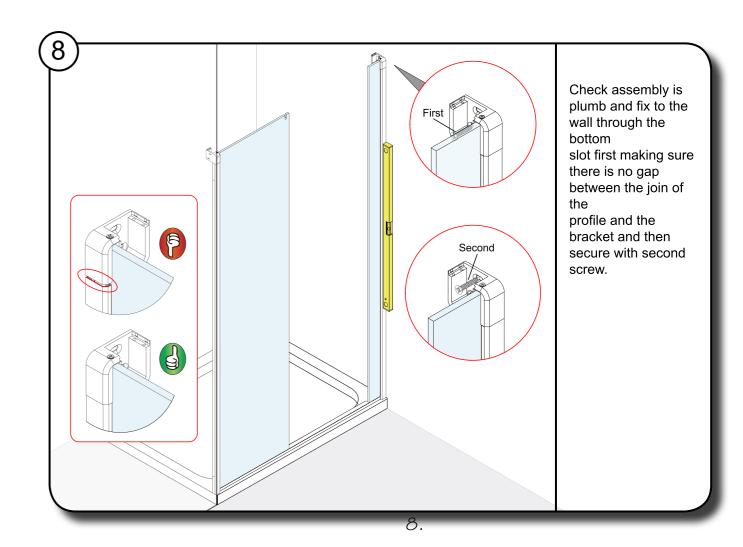


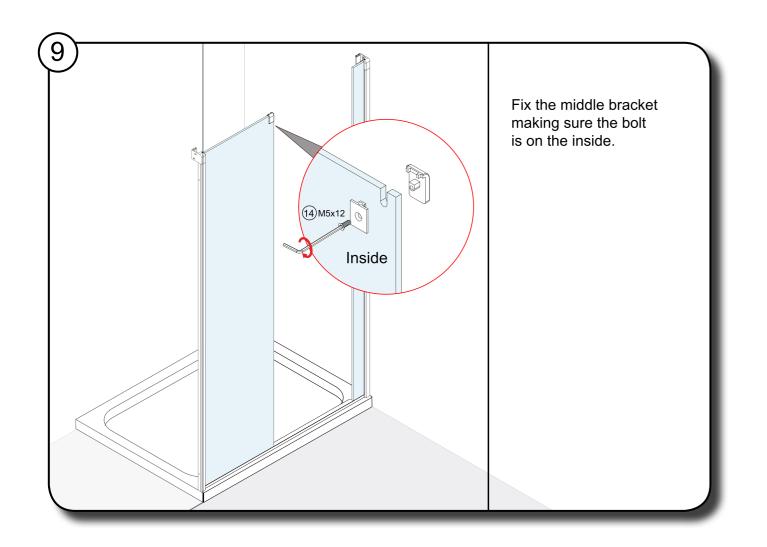


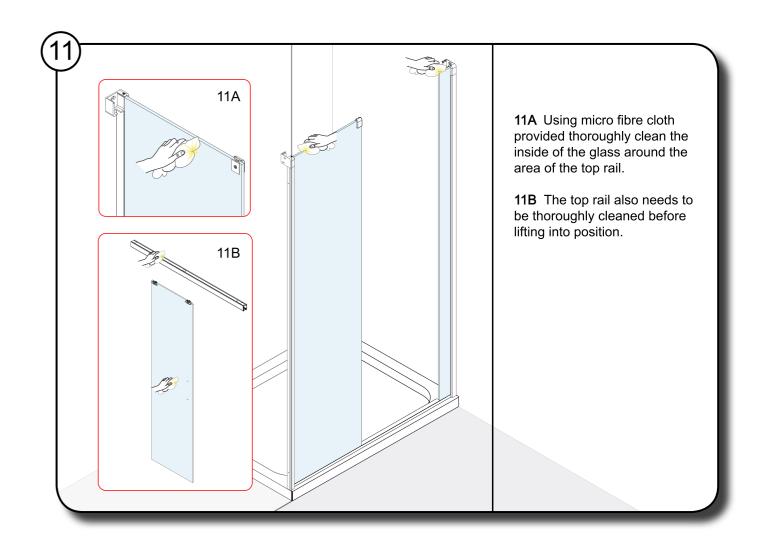

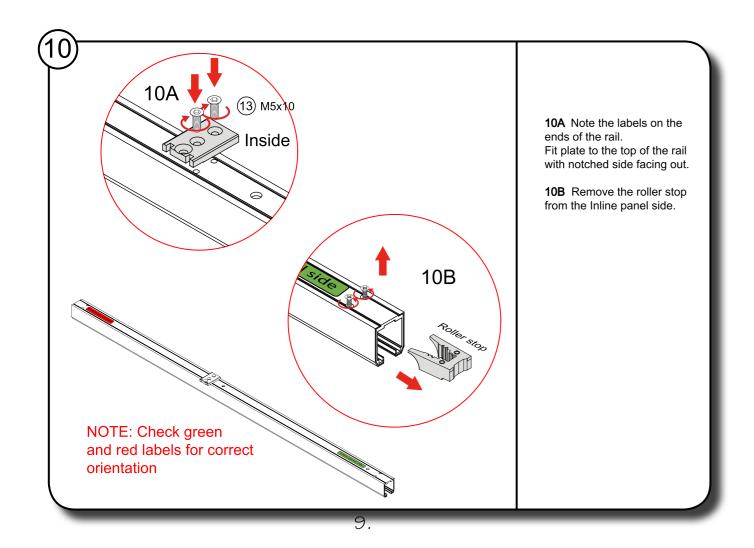

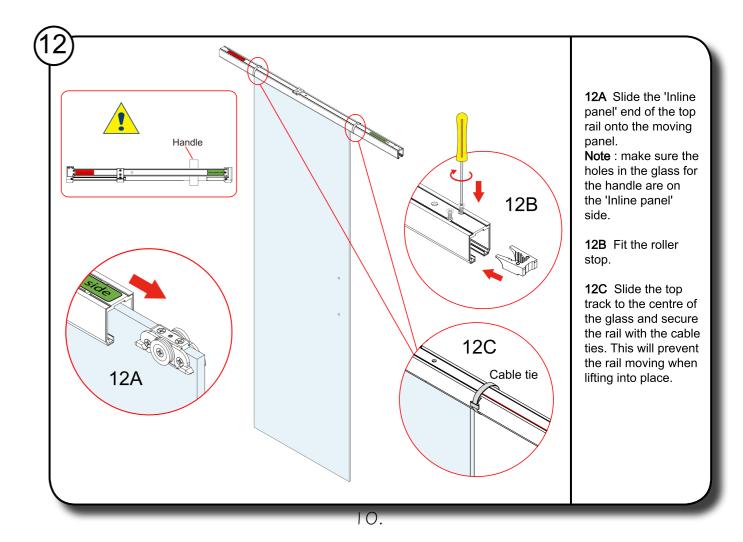

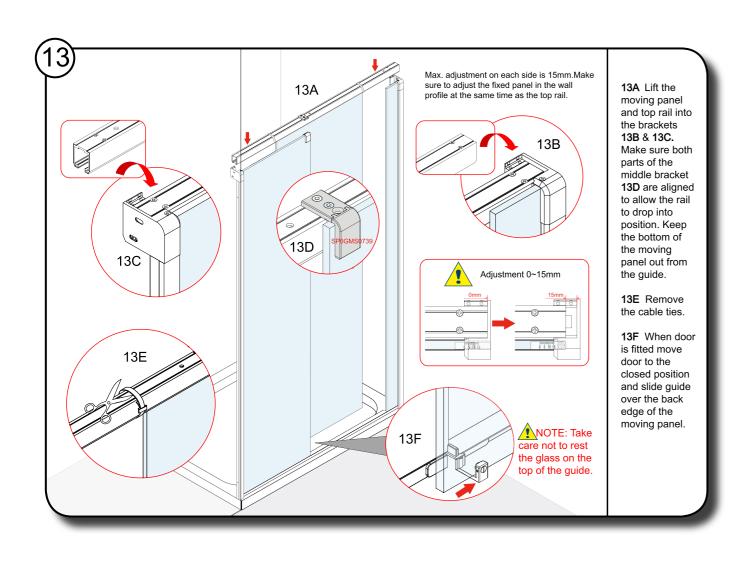


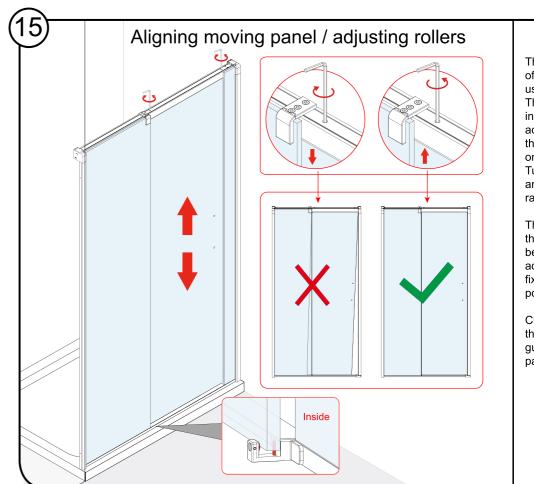



The height and alignment of the door can be adjusted using the hex key provided. The moving panel must be in the closed position to access the adjusting screw through the access ports on the top of the rail. Turn clockwise to lower and anti-clockwise to raise.


The vertical alignment of the moving panel should be adjusted so there is adequate over lap with the fixed panel and the closing post.


Check the glass is touching the the plastic inserts of the guide at all times, lower the panel if necessary.

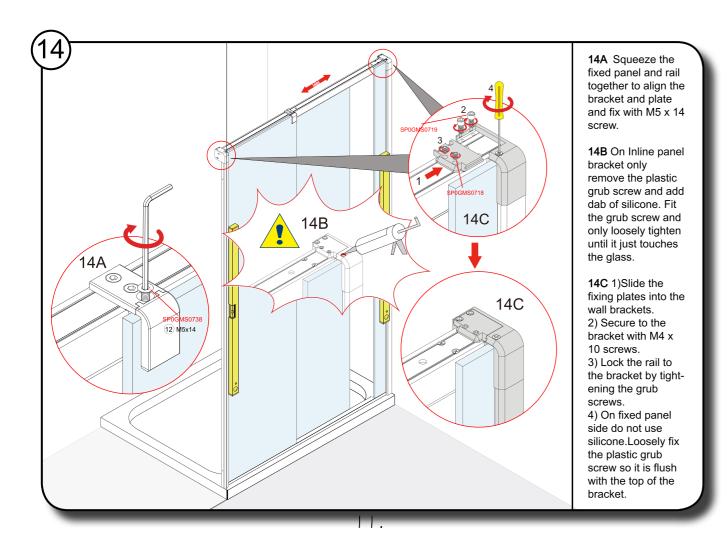


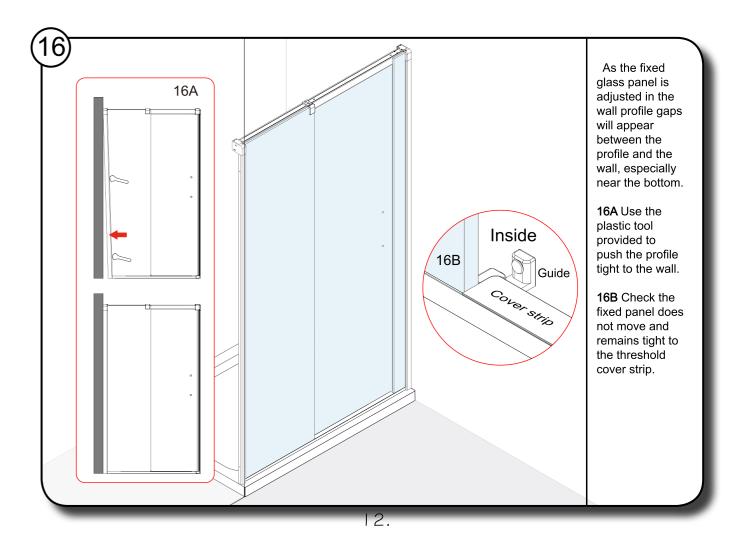

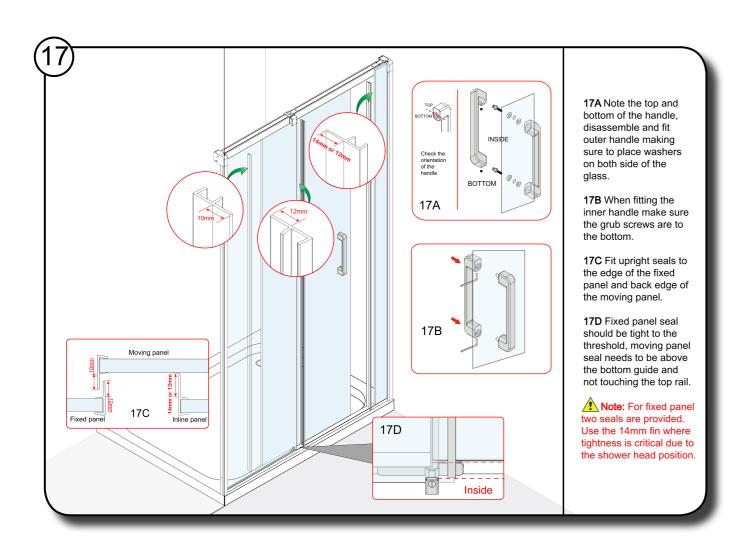

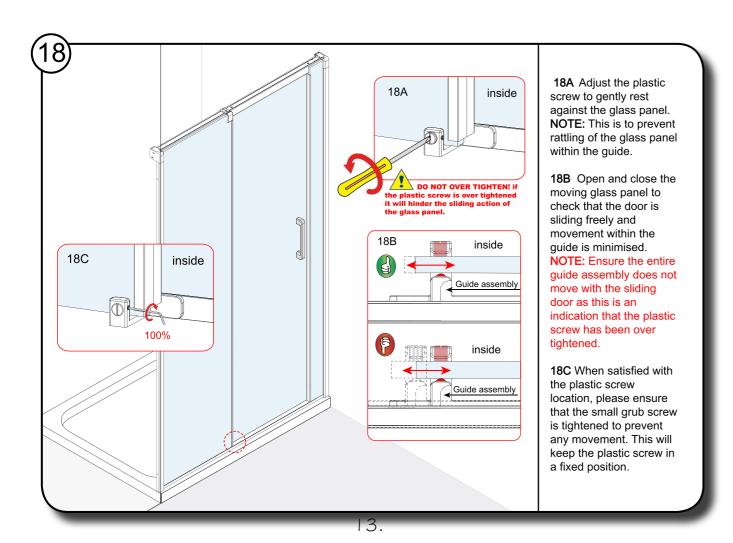

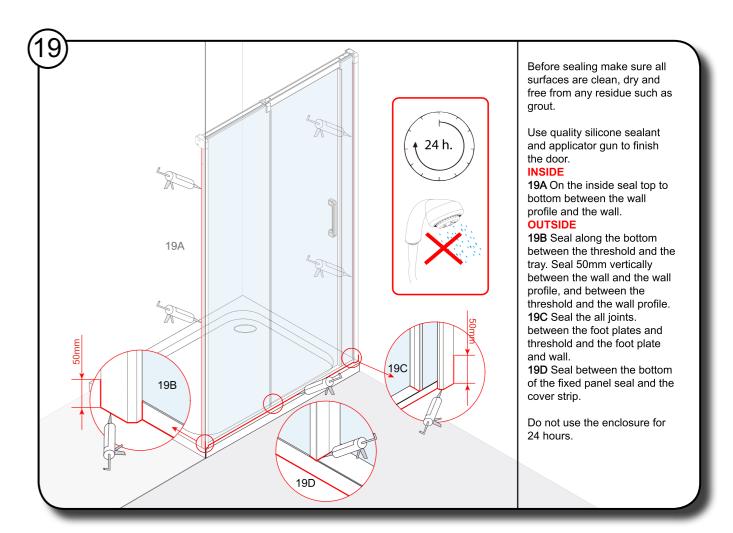

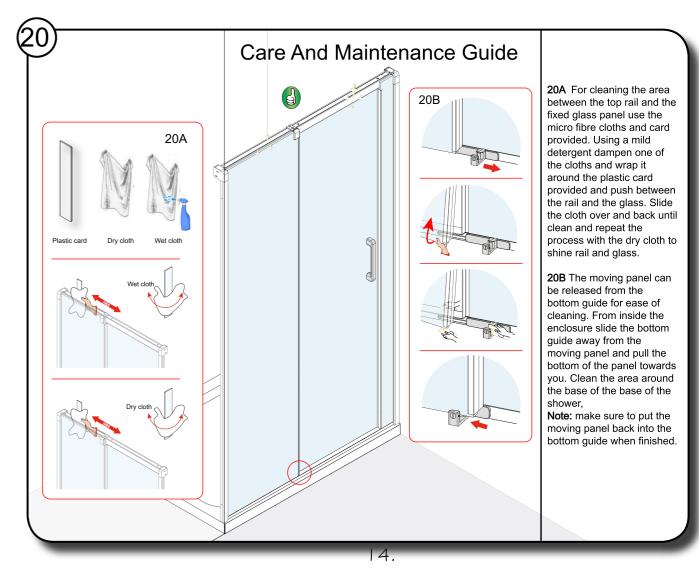

MERLYN

Merlyn Showering Unit 8, Purcellsinch Industrial Park, Dublin Road, Kilkenny, Ireland. Tel: 00353 56 779 1555

Tel: 00353 56 779 1555 Fax: 00353 56 779 1576

www.merlynshowering.com

To download the Declaration of Performance (DOP) for this product please use the link below. https://merlynshowering.com/aftersales-support/dop-certs/